


Bakfiets.nl Cargo bike – rain tent - Instructions



M6 drill bit



M6



NR 10



Example: Just as shown in this image, we are going to mount two adapters on the front wheel of the box.



Mark with a pencil where the four holes should be.



Now carefully drill the four holes with an M6 wood drill. **Make sure you measured it correctly.**



After you have drilled the four holes on each side of the box, you can mount the adapters to the box with the supplied nuts and bolts as shown in the image.




As shown in the image, you can also drill two holes on the handlebar side



Now attach the two supplied hooks and bolts to the box.

Bakfiets.nl Cargo bike – rain tent - Instructions

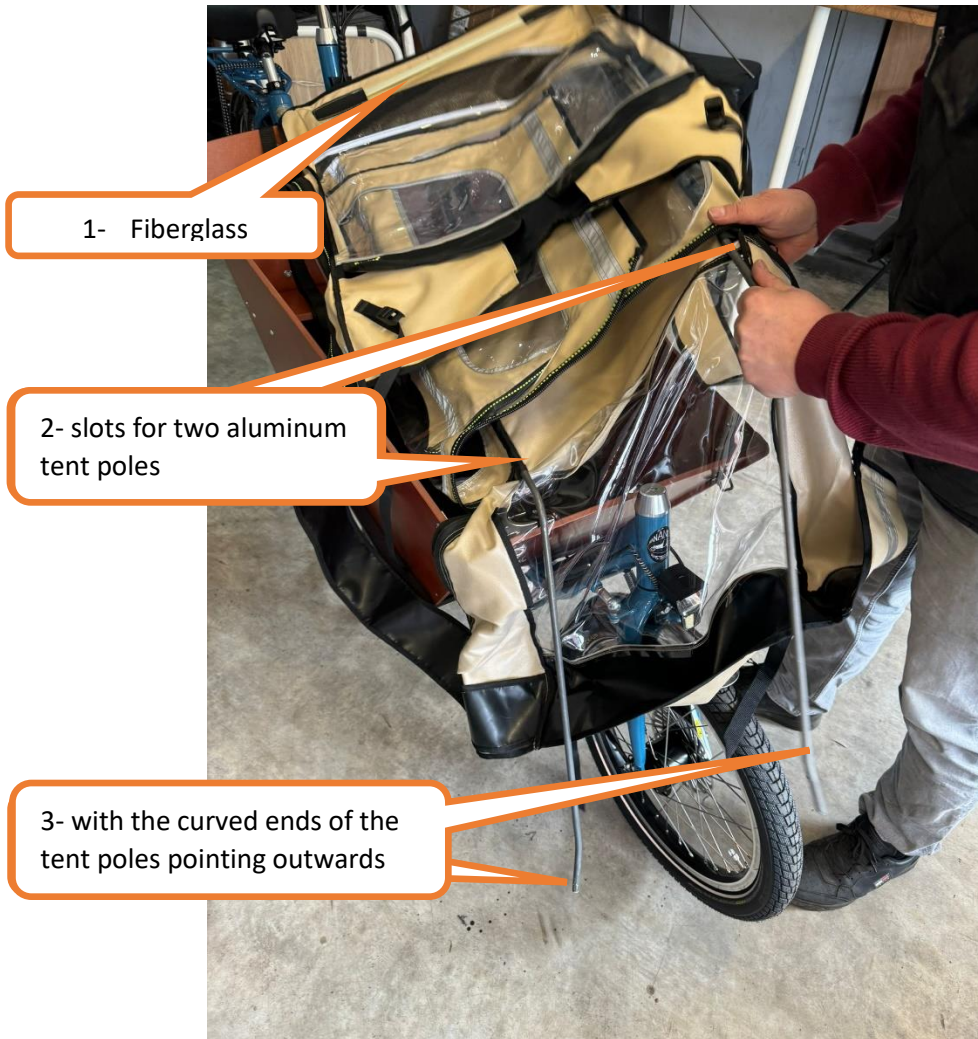

1- Fiberglass

2- slots for two aluminum tent poles

3- with the curved ends of the tent poles pointing outwards

- 1- Place the fiberglass slat into the slot at the back of the rain tent
- 2- Place the two aluminum tent poles in the slots on the left and right side of the rain tent
- 3- The curved ends of the tent poles should point outwards



- 1- Now grab the rain tent by two tent poles and turn it over, with the points pointing downwards.
- 2- Now insert the tent poles into the appropriate holes in the adapters



Now pull the rain tent around the box

Bakfiets.nl Cargo bike – rain tent - Instructions



Now fasten the buckles at the back near the handlebar side as shown



Also on the right side



This is what it should look like.

Bakfiets.nl Cargo bike – rain tent - Instructions



Congratulations, if you have completed all the steps correctly, you have now installed the rain tent correctly.

We wish you a lot of fun with the new Bakfiets.nl XL rain tent from Bakfix.